



PRODUCT MANUAL

2025



info@ovplus.com

.....
EU Service Center:

Musikantenweg 78
60316 Frankfurt am Main
Germany

.....
HQ office

2nd Flr, Building 1,
Global Metropolis Plaza,
No.58 Yaoyuan Road
Pudong New District,
Shanghai, P.R.CHINA

FEEL THE POWER RIDE THE FUTURE



DEALER MANUAL FOR OV+ PowerLink-200I







1.1 Device Installation	3	1.2 Calibration Setup	6
1.1.1 Standard Components	3	1.2.1 Crank Length Input	6
1.1.2 Required Tools	3	1.3 Service & Support	7
1.1.3 Pre-installation Preparation	4	1.3.1 Service & Support	7
1.1.4 Power Pedal Installation	5		

1.1 DEVICE INSTALLATION


1.1.1 Standard Components

Power Pedals	2
Pedal Washers	2
Cleats (RS:4.5°; RK:6°)	2
Cleat Spacers	6
Cleat Bolts	6

1.1.2 Required Tools

Use of the tools		Tools
Pedal Removal and Installation		8mm Hex Wrench
Pedal Removal and Installation		Bike Grease
Pedal Removal		Isopropyl Alcohol
Pedal Removal		Clean Cloth


1.1.3 Pre-installation Preparation

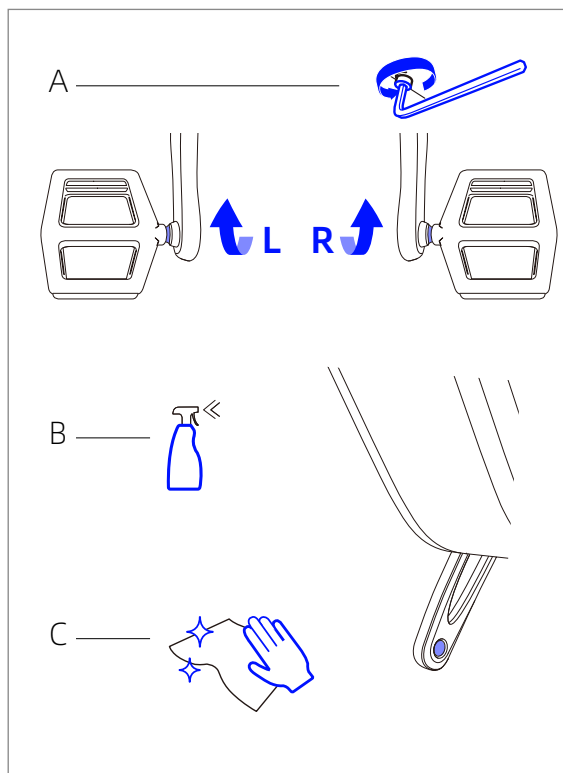

- A 8mm Hex Wrench
- B Isopropyl Alcohol
- C Clean Cloth

- 1) Align the pedal wrench with the spindle, facing the rear of the bicycle.
- 2) Hold the pedal with one hand, press the wrench with the other.
- 3) Rotate consistently in the same direction until pedal is removed.
- 4) Use an alcohol-dampened cloth to clean the crank arm pedal thread holes.

1.1.4 Power Pedal Installation

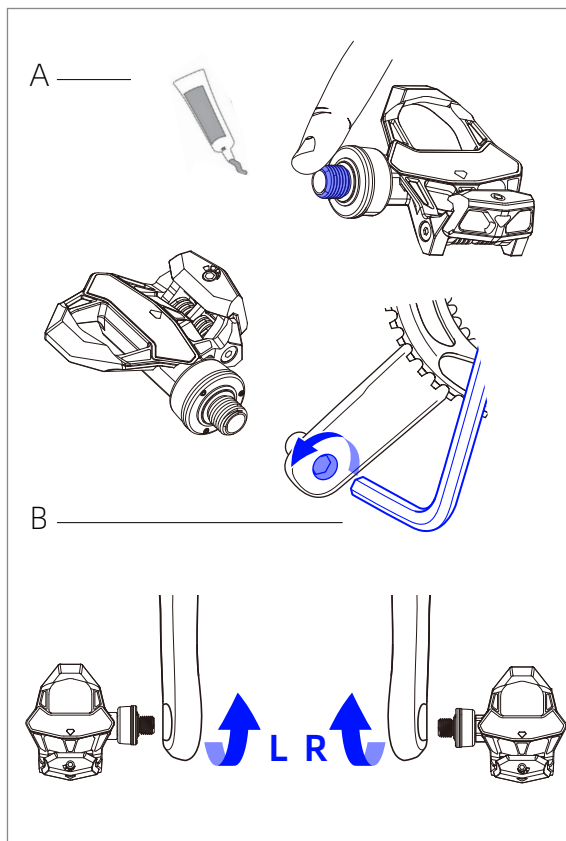

A Bike Grease

B 8mm Hex Wrench

- 1) Start with the right pedal.
- 2) Apply a layer of bike grease to the pedal spindle.
- 3) Insert spindle into crank arm.
- 4) Tighten with 8mm hex wrench to torque spec: 30 N·m

1.2 CALIBRATION SETUP

1.2.1 Crank Length Input

Manual calibration is required after installation. Turn the crank arms to a vertical position and perform a Zero Offset calibration via the app or head unit. Then, input the actual crank length (in millimeters). Recalibration is required whenever the bike or crank arms are changed.

1.3 SERVICE & SUPPORT

1.3.1 Service & Support

- 1) We support custom branding services, including logo printing upon request.
- 2) For customization details, product manuals, or downloads, please visit: www.ovplus.com